

INVISI-FAST™


HIDDEN DECK FASTENER

INSTALLATION

BISCUIT™


CLEAR POLYCARBONATE GROOVED BOARD FASTENER

INSTALLATION

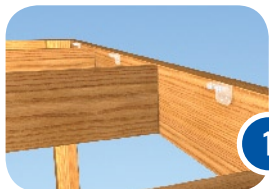


Step 1: Install Invisi-Fast No-Spacer on ledger board.

Be sure overhang tabs are flush on top of ledger board. Use center screw location going into ledger unless wood imperfection is present. If the center screw hole cannot be used, use one of the other two available screw holes. The Invisi-Fast No-Spacer should be placed on the farthest edge near the outside corners and in-between the joists elsewhere. Where the two boards meet (butt joint) use one Invisi-Fast No-Spacer on either side of the joint underneath the deck board to secure the end of each board.

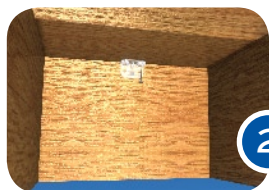


Step 2: Place the first deck board using the desired overhang. Install two screws into the deck board using the two holes provided in the underside of Invisi-Fast No-Spacer.


Make sure that the board is straight as the screws are tightened.

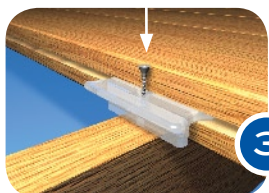

Step 3: Insert Invisi-Fast Biscuit fastener into the groove of the board, centering the fastener on joist. Tighten the screw only half way into joist. Be sure the screw is in the center of joist. Continue installing Invisi-Fast Biscuit fasteners in the center of each joist along the remainder of deck board.

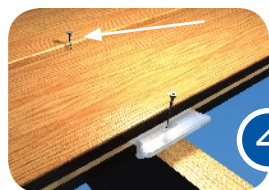

Step 4: Slide next deck board firmly in place while aligning Invisi-Fast Biscuit fasteners into the groove. Install the next row of Invisi-Fast Biscuit fasteners into the groove of the second board as in Step 3. Before installing the screw, be sure deck board is snug to the fastener between board 1 and 2. Continue installing Invisi-Fast Biscuit fasteners in the center of each joist along the remainder of deck board.

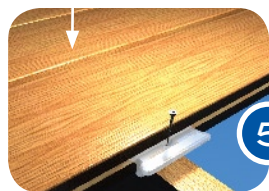

Step 5: Tighten screws in first row between deck board 1 and deck board 2. Continue tightening screws along the remainder of deck board. Continue installing Invisi-Fast Biscuit fasteners into deck boards as in Steps 3 and Step 4.

6 Step 6: When the last deck board needs to be installed, secure it to the ledger using the Invisi-Fast No-Spacer as in Step 1.



www.invisifast.com
1-866-766-9427

WARRANTY

The following warranty is made in lieu of all other warranties expressed or implied. Any goods proven to be defective due to materials will be replaced, or purchase price refunded. Under no circumstances shall the manufacturer be responsible for damages in excess of the purchase price. User shall determine the suitability of the product for its intended use and assumes all risks of its use or handling. There are no warranties on screws or tools sold or recommended. Please contact M.M. Products for shipping information. M.M. Products, Inc. is not responsible for damages caused by excessive shrinking or expanding of treated lumber due to moisture.

Please be sure to check with your deck board manufacturer for proper deck board spacing when using the Invisi-Fast™ Hidden Deck Fastening System. Use necessary safety precautions when installing Invisi-Fast™ Hidden Deck Fasteners. / Patent Pending / *Must be purchased separately.

For more information, visit www.invisifast.com or call 1.866.766.9427